


# T.E.D.D. TACTICAL ELECTRONIC DISTRACTION DEVICE

750-500

## T.E.D.D. REFERENCE GUIDE

#### **FULL ASSEMBLY**

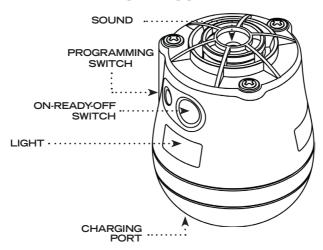

#### TO BE OPERATED BY TRAINED PERSONNEL ONLY

T.E.D.D. is not intended to be used as a weapon, either launched or thrown like a rock. It is meant to cause maximum disruption with minimal damage. Avoid striking people or animals with it.

- LIGHT: 2,600 Lumen LED: 360° horizontally, and 110° vertically (+80° -30°)
- Sound: 120 dB (at 1 m) 3kHz
- Submersible to 10 ft (3.3 m)
- Shock resistant
- Rechargeable Lithium-Ion Battery System

T.E.D.D. SHIPS IN SAFETY LOCK MODE (MODE 8). ONCE CHARGED, USE THE PROGRAMMING SWITCH TO PUT THE UNIT INTO AN ACTIVE MODE AND DEPLOY.

## **OVERVIEW**

- Eight (8) programmable Light and Sound Modes.
- Four (4) programmable Activation Delays.
   Retains all programmed details in memory.
- ON-READY-OFF Switch
- Programming Switch (small, recessed) use a small tool like a pen, pencil, or handcuff key to activate

To Turn ON: Unit must be Readied by pressing ON-READY-OFF Switch, which lights up Green. When ready to deploy, press Switch again, and the Green light will start blinking, indicating that the programmed Activation Delay has begun.

To Turn OFF: Pressing the same Switch once more. The Green light goes
off.

Note: Unit is shipped in mode 8 (safety lock). If no response, program unit as specified in the next section.

## **PROGRAMMING**

Light & Sound programmed by pressing recessed Programming Switch while the ON-READY-OFF (O-R-O) Switch is in OFF mode. Audible sound provides feedback. This programming must be entered within 4 seconds.

Press Once:	Turbo Strobe and Sound: 2 sec., then STOP	
Press Twice:	Turbo Strobe and Sound: 10 sec. ON, 30 sec. OFF, then Repeat	
Press 3 times:	Light and Sound: 2 sec., then STOP	
Press 4 times:	Light and Sound: 10 sec. ON, 30 sec. OFF, then Repeat	
Press 5 times:	Turbo Strobe: 2 sec., then STOP	
Press 6 times:	Light ON Continuous (must be turned off by user)	
Press 7 times:	Sound: 2 sec., then STOP	
Press 8 times:	Safety Lock	

Note: Modes are retained in memory.

### PROGRAMMING CONTINUED

Activation Delay Modes. Programmed by pressing Programming Switch while the unit is Ready (steady green light). Audible sound provides feedback. This programming must be entered within 2 seconds.

Press 1 time	2 seconds
Press 2 times	4 seconds
Press 3 times	7 seconds
Press 4 times	10 seconds

Once the unit is activated, it goes through a repetitive cycle with the times shown above. To turn it off, simply press the ON-READY-OFF Switch.

Charge the T.E.D.D. by attaching the DC charger provided to the access port on the metallic base.

#### **DURABILITY**

- Steel base, High Temperature Polycarbonate side, nylon top cover. Can survive a drop of 2 stories (17 ft and 3.7 m) onto concrete.
- Submersible to 10 ft (3.3 m)

#### **BATTERY**

- Device autonomy: 60 minutes continuous light & sound
- Battery Li-Ion Rechargeable pack (built in) Charge time 1.5 hours
- Battery life: 500 full recharges to 70% of battery life 100-240VAC 50/60 Hz, 12.6VDC, 0.6A.
- The battery manufacturer recommends fully charging the unit at least every 3 months to best maintain battery condition

#### **DIMENSIONS & WEIGHT**

- ♦ 2.5 in (63 mm) diameter, 3.4 in (82 mm) height
- ♦ Weight: 1.1 lbs (490 g)

## TO OPERATE T.E.D.D.

TURN ON	
Press O-R-O Switch	Solid Green light should come on
Press O-R-O Switch	Green light starts blinking After programmed Delay, unit will be Active and function according to programmed Mode
TURN OFF	
Press O-R-O Switch	

## **DEPLOYING T.E.D.D.**

- T.E.D.D. user must be a trained law enforcement professional.
- T.E.D.D. can be cautiously deployed in any manner the user deems necessary. It can be rolled, thrown, or dropped. If T.E.D.D. is rolled, the product life is maximized.

#### **♦** WARNINGS

- If T.E.D.D. is thrown or dropped, the product life will depend on the force with which it is thrown or the height from which it is dropped. While T.E.D.D. will sustain several 12 ft (3.7 m) drops with minimal damage, it is impossible to provide guidance on every imaginable scenario.
- Use maximum caution when deploying T.E.D.D. as the product becomes a 1.1 lb (500 g) projectile. FoxFury accepts no liability for damages or injuries caused by incorrect use of T.E.D.D..
- T.E.D.D. should never be thrown at people or animals.

## TO CHARGE T.E.D.D.

- Plug DC Adaptor into the bottom of T.E.D.D.
- Plug the other end into AC
- Adaptor unit LED should turn RED
- After fully charged (1.5 hours from empty), light will turn GREEN

# WARRANTY AND OTHER INFORMATION

#### PRODUCT DURABILITY

IMPACT RESISTANT: 17 FT (3.7 M)
WATERPROOF: 10 FT (3.3 M)

CE-EMC. IPX7

PRODUCT NAME: T.E.D.D.
MODEL NUMBER: 750-500

ADAPTOR INPUT: AC 100-240VAC,

50/60 Hz

Meets requirements of NFPA 1971-8.6

(2013)

#### CARE/CLEANING

Your FoxFury product is a professional tool. Regular maintenance and care of your light will maximize performance for you. As needed, wash your FoxFury product using a soft washcloth, clean water and a mild soap. When done, pat dry with a damp cloth.

#### **AVAILABLE ACCESSORIES**

- TEDD Pouch, Black, P/N 850-600
- TEDD Pouch, Black Trade Compliant, P/N 850-600-TC
- Substitute Wilder Wilde

#### **WARNINGS**

FoxFury, LLC is not responsible for the incorrect use of any FoxFury Lighting product.

- Lights are strong enough to cause damage to the human eye.
- Do not stare into LEDs for long periods of time or from a close range (less than 2 ft).
- FoxFury, LLC is not responsible for any injury or damage caused during the use of this product.

- Any FoxFury product should be operated at speeds safe enough to maneuver around surrounding obstacles.
- Do not use under the influence of drugs or alcohol.

#### 3-MONTH WARRANTY

Distraction Devices (T.E.D.D. and others) are meant to be cautiously thrown. These items carry a three (3) month warranty with proof of purchase. While every precaution has been taken to maximize product durability, there is no way to validate if such an item has been used in extreme circumstances.

All warranty inquiries should be directed to FoxFury's Customer Service Department to handle all warranty/repair-related inquiries.

TO THE EXTENT ALLOWED BY APPLICABLE LAW: (A) IN NO EVENT, WHETHER DUE TO BREACH OF WARRANTY HEREUNDER OR ANY OTHER CAUSE WHATSOEVER, SHALL FOXFURY BE LIABLE FOR OR OBLIGATED IN ANY MANNER TO PAY CONSEQUENTIAL. INCIDENTAL OR INDIRECT DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, COST OF SUBSTITUTE PRODUCTS AND PERSONAL INJURY OR PROPERTY DAMAGE. WHETHER SUCH CLAIM IS BASED ON CONTRACT OR TORT OR ANY OTHER THEORY OF LAW, AND

(B) FOXFURY'S ONLY DUTIES IN CONNECTION WITH THE SALE OF THIS PRODUCT SHALL BE TO HONOR THE LIMITED WARRANTY SET FORTH HEREIN. TO THE EXTENT THAT THIS LIMITED THIS IS THE ONLY WARRANTY. EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL. CONSEQUENTIAL OR SPECIAL DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW.

You may have other specific legal rights which vary by jurisdiction. Go to www.foxfury.com/pages/warranty for a complete copy of the warranty. Retain your receipt for proof of purchase.

#### CONTACT FOXFURY

FoxFury, LLC
Oceanside, CA 92056 USA
Toll-Free: 844-FOXFURY
Tel: 760.945.4231
Fax: 760.433.3650

**Email**: service@FoxFury.com **Web**: FoxFurv.com

All FoxFury products are designed in Oceanside, CA. All FoxFury products are manufactured with the highest quality USA and foreign parts. Products are assembled in either FoxFury's controlled plant in Asia or the USA, under strict quality control.

## CALIFORNIA PROPOSITION 65

This product can expose you to chemicals including Lead and DEHP, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www. P65Warnings.ca.gov.

